



**Application:** Corvette 1969-1982

**Part Includes**

1 - Outer Door Handle Spring

## Outer Door Handle Spring



**Tools Needed**

**STEP 1.**

Using gloves to protect your hands, hold the door handle flap in the full down position.

**STEP 2.**

Compress the ends of the handle spring toward each other until they can be inserted over the top of the original spring. Note: DO NOT compress the spring ends together more than 1/4". Doing so will cause the spring to break and void the warranty.

**STEP 3.**

Compress the spring at the ends only enough to start the spring ends into the handle.

**STEP 4.**

While holding the handle flap in the full down position, push the spring at the top until it bottoms over the old spring.

**STEP 5.**

Release the handle flap and the spring is installed.

**STEP 6.**

Once in place, lubricate the spring using 30SAE motor oil at the bend and both ends. Your new door handle spring should be lubricated every 60 days or when there is no visible sign of oil around the spring. This product has a 90 day warranty on defects, workmanship, and materials starting from the date of purchase.



MAMotorworks



Midamotorworks



blog.autotainment.com

**17082 N. US Hwy 45, P.O. Box 1368, Effingham, IL 62401**  
**800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800**  
**www.mamotorworks.com • mail@mamotorworks.com**

©Mid America Motorworks, Inc. All rights reserved.