



Application: 1968-1977 Volkswagen Standard Beetle Sedan
1971-1977 Volkswagen Super Beetle Sedan
1968-1973 Volkswagen Type 3


Part Includes

2 - Exterior Side Mirrors
2 - Mirror to body seals

Exterior Mirrors - Driver & Passenger



Tools Needed

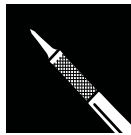

NOTE: If your vehicle is already equipped with Exterior Mirrors simply remove the original mirrors and install new units directly in their place.

NOTE: Due to a much thicker chrome coating than the original VW mirror, it may be necessary to chase (clean) the threads before installation. A tight fit is normal.

STEP 1.

Properly position supplied template on the driver side door.

STEP 2.

With center punch and light hammer tap an indent into your door skin on the X.

STEP 3.

Roll door window down entirely then drill a 1/8" pilot hole where you made your mark.

STEP 4.

Now drill your pilot hole out to a final size of 5/8".

STEP 5.

Roll window back up and remove interior door panel and trim. This will give you access to install the mirror nut on the inside of the door skin.

STEP 6.

Insert threaded portion of mirror base in 5/8" hole.

STEP 7.

Install nut and tighten securely, making sure that the mirror base is straight.

STEP 8.

Reinstall door panel, shut door and adjust mirror for best vision.

STEP 9.

Repeat steps 1-8 on the passenger side.

See reverse for template >



MAMotorworks



Midamotorworks



blog.autotainment.com

17082 N. US Hwy 45, P.O. Box 1368, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • mail@mamotorworks.com


©Mid America Motorworks, Inc. All rights reserved.



306-153

Exterior Mirrors Template

Driver Side

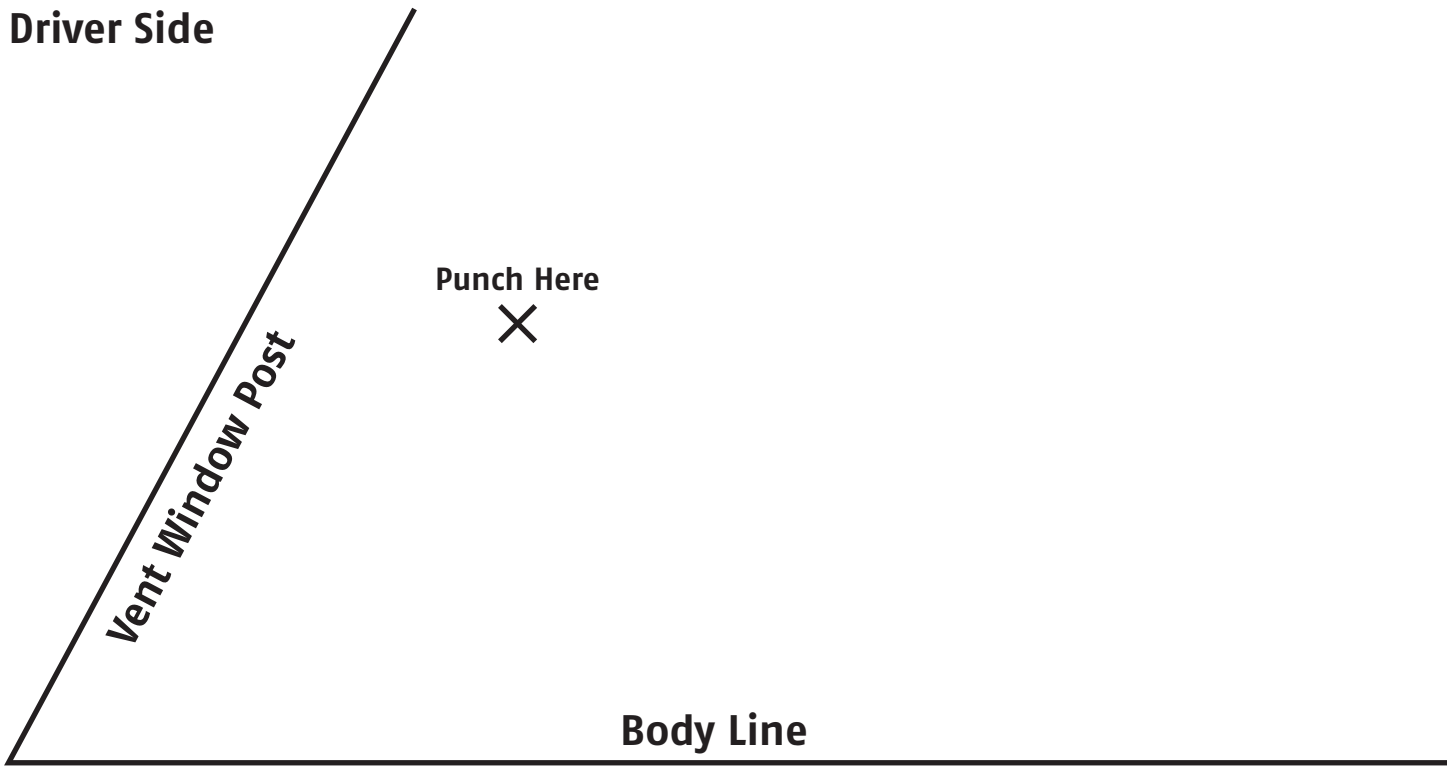

Passenger Side

