



Application: Corvette 1997-2001


Part Includes

1 - Pair of Sill Protectors

Clear Sill Protectors



Tools Needed

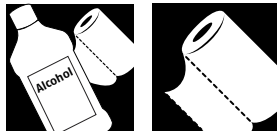

INSTALLATION IS A SIMPLE "PEEL AND STICK" PROCEDURE.

STEP 1.

Remove wax buildup from area to be covered.

STEP 2.

Remove red backing from clear double stick tape.

STEP 3.

Remove fingerprints from underside of sill protector.

STEP 4.

Press in place and remove air bubbles by pressing to outer edge.



MAMotorworks



Midamotorworks



blog.autotainment.com

17082 N. US Hwy 45, P.O. Box 1368, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • mail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.