



Application: 1984 - 1996 Corvette

Part Includes

1 - Rear Hatch Drain Kit

Drain Kit, Rear Hatch



Tools Needed



Search: **Rear Hatch**
www.mamotorworks.com

NOTE! Wrap chuck with duck tape to prevent damage to vehicle during drilling.

DIRECTIONS FOR SAFE AND PROPER INSTALLATION

Procedure:

STEP 1.

Gently pry weather stripping approximately six inches away from ledge corner with putty knife **SLOWLY** so as not to damage weatherstrip.


Hint: you may want to tie back the weatherstrip to the prop rod to keep it out of the work area.

STEP 2.

Using 1/8" drill bit, approximately 1" from corner (see Figure 1) IN A VERTICAL POSITION, drill a pilot hole through both layers of fiberglass. (Layers are approximately one inch apart.) Repeat this step with the 5/16" drill bit.

STEP 3.

Wrap one piece of "shoestring" caulking (included) or silicone adhesive (not included) around brass grommet. Feed drain tube down through holes drilled, pressing grommet flush into corner. Remove excess caulking as needed. Brass grommet may be painted, if so desired. You may test your handiwork by pouring water into the sill area near the grommet. The water should drain out in front of the wheel well area. Reinstall weather stripping from Step 1.

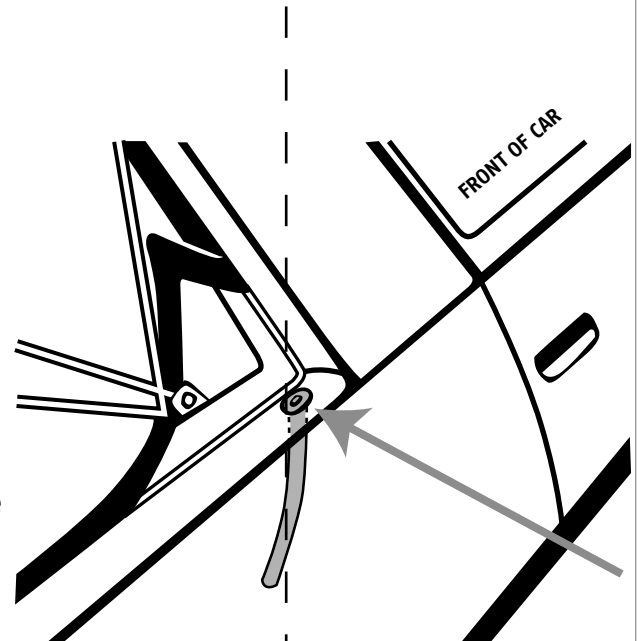

DRILL HOLES
VERTICALLY

FIGURE 1



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.