



Application: 1984-1990 Corvette

Part Includes

- 1 - Cover
- 2 - Screws

Curved Front Plate Cover



Tools Needed



Search: *License Plate*
www.mamotorworks.com

STEP 1.

Remove original panel from license plate area.

STEP 2.

If necessary, notch or drill license plate where screws will go.

STEP 3.


Install license plate in position.

STEP 4.

Install clear plastic lens cover by using your original screws, or with the provided Phillips Head screws.

TIPS

Use a #1 Phillips screwdriver (it is smaller in diameter). Lay a credit card or small piece of plastic on lower screw holes to protect paint.

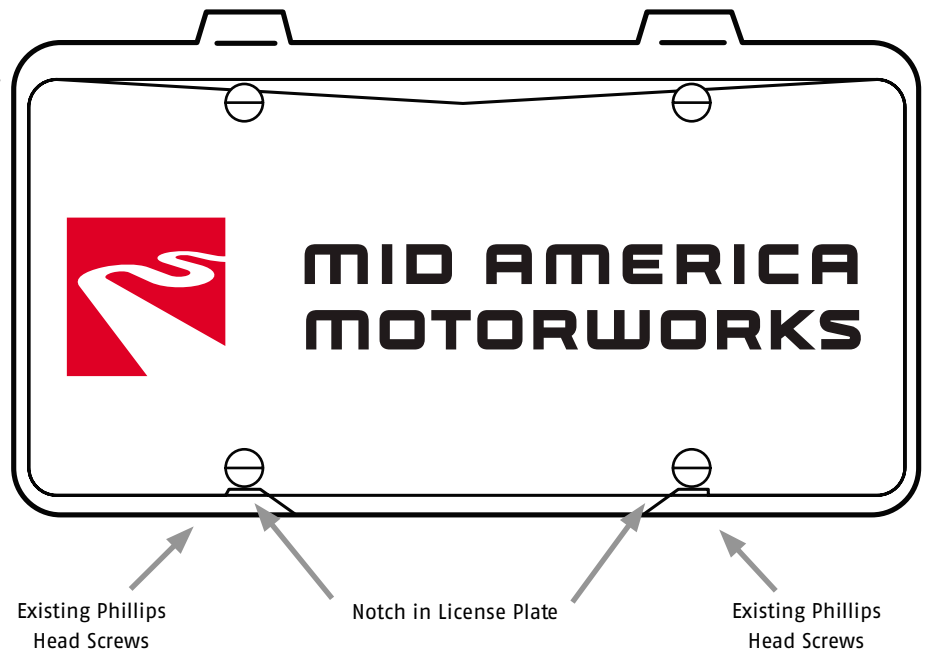

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.