



Application: 1997-2004

Part Includes

Custom Fit Splash Guard




Tools Needed




STEP 1.

Install mounting tabs on each guard using (2) 3/8" Phillips machine screws and (2) keps nuts. Bend tabs so it will lie flat on lower fender surface.

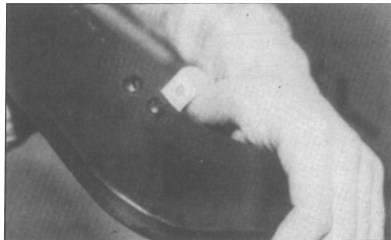

STEP 2.

Hold guard up to fender in position. NOTE: masking tape should be applied for marking holes to drill. Apply tape to fender well. Holding guard in perfect level position, mark through holes in guard onto tape. A helper can assist in aligning per diagram A.

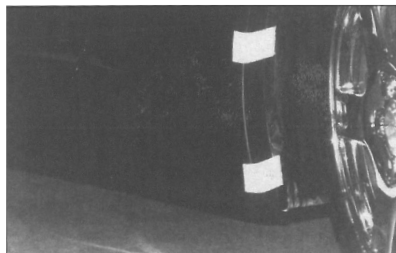


STEP 3.

Drill with a 9/64" bit (3) locations, 2 in fender well and 1 for lower bracket that lies flat against the lower body. Remove masking tape, install supplied (3) mounting screws. Make sure the guard edge fits flush with painted surface so not to rub paint.

STEP 4.

Remove rear wheel. Repeat step 2 using tape and marking holes for drilling. Install supplied (3) mounting screws and flat nuts. Reaching up from under the body, hold flat nut behind the body panel so mounting screw will pull tight. A helper can assist in aligning per diagram A.

DIAGRAM A

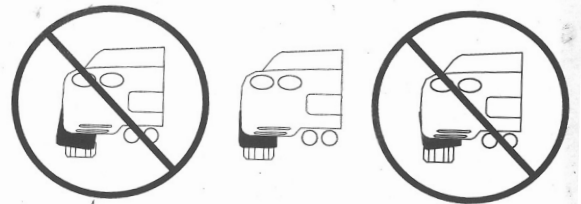

Installation is simple, however, for best results have a helper assist in aligning guards and drilling holes.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.