



Application: 1963-1967 Corvette

Part Includes

1 - Glove Box Light Switch

Glove Box Light Switch, 2nd Design




Tools Needed



Search: **Grilles**

www.mamotorworks.com

If your vehicle was not originally equipped with a Glove Box Lamp, the power supply lead (usually red, orange or black with orange stripe) should be coiled and taped to the vehicle's dash harness.

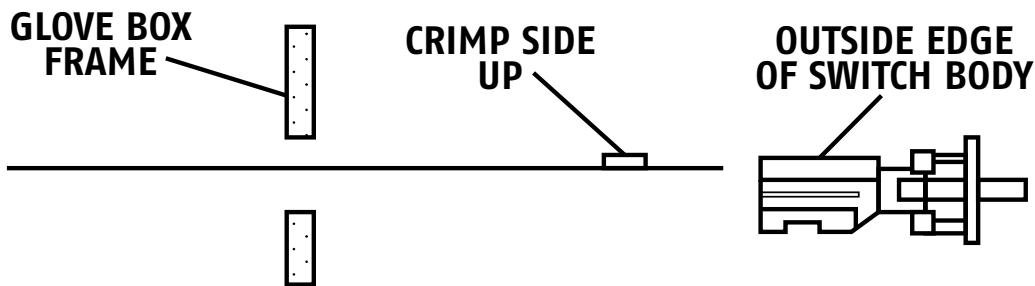

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.