



**Application:** 1997-2004 C5 Corvette

**Part Includes**

4 - Brake Pad Covers

## Brake Pad Covers



### Tools Needed



**NOTE:** These custom pad covers in NO way alter your braking system. Please follow instructions carefully and be sure to put your brakes back together safely and securely.

#### **STEP 1.**

Jack up your car and place it on a pair of jack stands for safety then remove the wheel.

#### **STEP 2.**

Remove both caliper retaining bolts and remove caliper.

#### **STEP 3.**

Compress the caliper piston slightly to create the clearance of the new brake pad cover.

#### **STEP 4.**


Remove the outer brake pad and apply a small smear of household silicone to the back of your new stainless pad plate and place it over the brake pad.

#### **STEP 5.**

Reposition the pad and reposition brake caliper and tighten **SECURELY!**

#### **STEP 6.**

Follow steps 1-5 for the 3 remaining wheels.

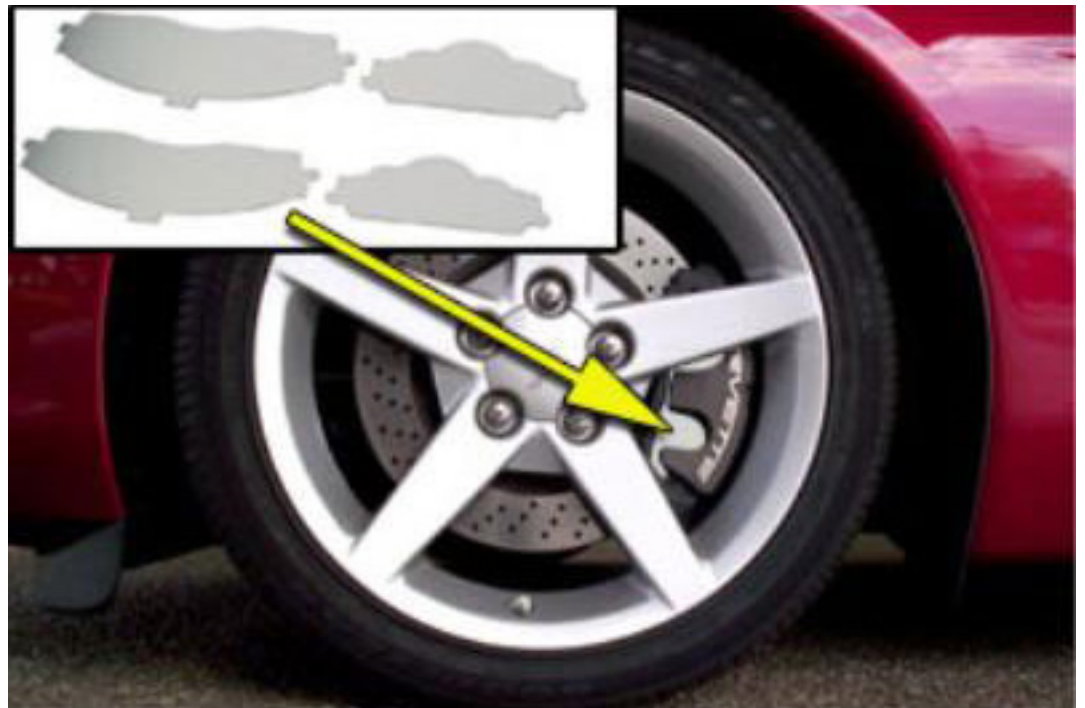

MAMotorworks



Midamotorworks



MidAmericaMotorworks

2900 N. Third Street, P.O. Box 1368, Effingham, IL 62401  
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800  
[www.mamotorworks.com](http://www.mamotorworks.com) • [mail@mamotorworks.com](mailto:mail@mamotorworks.com)

©Mid America Motorworks, Inc. All rights reserved.