



Application: 2005-2013 Corvettes




Search: *Lighting, Exterior & Interior*
www.mamotorworks.com

C6 License Plate LED Light Bulb Kit



Tools Needed

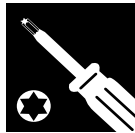

Step 1: Using a #15 Torx screwdriver, remove the 2 screws holding the license light in place.



Step 2: Remove the light housings, twist the grey socket 1/4 turn counterclockwise to remove it from the housing.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

Step 3: The bulb may be hot so use a shop towel to grab it and remove it.



Step 4: Turn on the lights. Plug in the led bulb. If it doesn't light, turn it 180 degrees and re-insert.



Step 5: Re-insert bulb socket into housing and twist 1/4 turn clockwise. Re-attach housing with the 2 torx screws and repeat for the second housing.

