



Application: Corvette 1968-1976

Part Includes

1 - Shifter Boot

Shifter Boot



Tools Needed



Search: **Dash & Center Console**
www.mamotorworks.com

DIRECTIONS FOR SAFE AND PROPER INSTALLATION

STEP 1.

Remove four shift boot screws. (Item A)

STEP 2.

Remove screws at four corners of console. (77-82 Corvettes requires removal of both side console trim panels for access of these screws.) (Item B)

STEP 3.

Remove shift knob by unscrewing it. Then lift T-handle and spring from shift lever (67-81 manual transmission cars only). (Item C)

STEP 4.

Carefully grasp and lift shift console up enough to gain access to bottom of console. Disconnect wires attached to cigarette lighter, fiber optic wires (1968-71) and console light.



STEP 5.

Remove shift boot from console by pushing the shift boot down enough to release the metal reinforced frame from the shift console.

STEP 6.

Install new shift boot to console with supplied mounting screws or reuse your old ones. (NOTE: Be sure to reconnect all wires disconnected when you removed the console.)

Note: We have found varied locations for the shift boot screw holes in original and reproduction shift surround plates. In view of this we recommend you put the shift boot in place on the plate and use an awl to mark the hole location and drill four 1/8" holes in the proper locations.

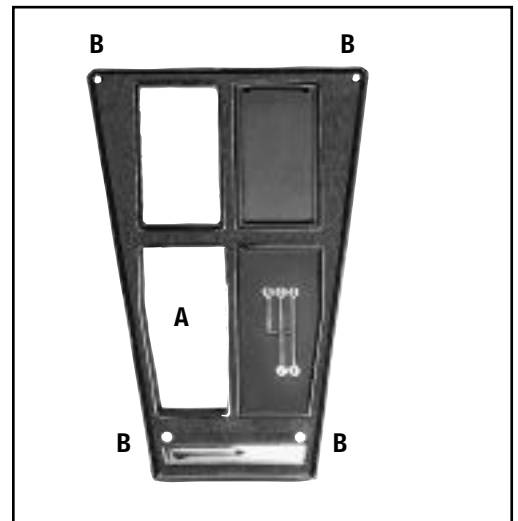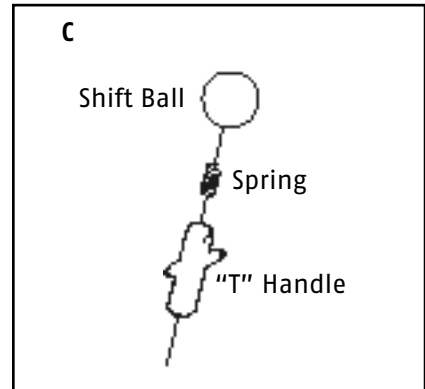

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.