



Application: Corvette 1997-2004


Part Includes

1 - Pair of Sill Protectors

Door Sill Protectors



Tools Needed

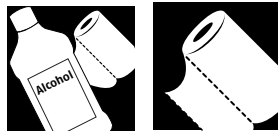

Search: **Carpet Sets**
www.mamotorworks.com

Note: Remove any fingerprints on back of clear sill protectors before installing. If sills have been treated with Armorall or similar preservative, this must be removed for best adhesion.

STEP 1.

Sill Protectors have a pre-installed double stick tape. It is best to pre-fit sills before removing tape backing.

STEP 2.

After "test fit", remove tape backing from all locations on sill. Carefully lay Sill Protector in place.

STEP 3.

When you are satisfied with location, press firmly in place.

STEP 4.

Congratulations, you have just applied a product that will preserve and add value to your Corvette.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.