



Application: 2014-2017 Corvette



Search: **Body Panels - Fiberglass**
www.mamotorworks.com


Part Includes

1 - Component

Concept 7 Rocker Panel Side Skirts



Tools Needed

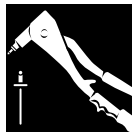

STEP 1.

Before installing your new carbon front splitter and rocker panels, the following tools are required: 1/8 and 3/16 drill bits, drill motor, rivet gun, 7mm socket and 10mm socket.

STEP 2.

Remove the four 7mm screws that hold on the front fender liner and rear brake ducts. Do not discard the fasteners. They will be re-used.

STEP 3.

Fit one of the carbon rockers to the bottom of the car, lining it up visually with the edge of the front fender. You should see the corresponding holes in the new panel that line up with the previously removed screws (see arrows at left).

STEP 4.

Re-install the previously removed 7mm screws and tighten them.

STEP 5.

Evenly space out the four supplied 3/16 rivets between the 7mm screws and drill 1/8 pilot holes. Follow the pilot holes with a 3/16 bit to enlarge them.

STEP 6.

Rivet the bottom of rockers to the bottom of vehicle via the 3/16 holes.

STEP 7.

Repeat the process for the opposite side of the vehicle.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.